


# Column Packing Comparison

## 1A Jaeger Plastic Low Profile Rings

Pressure Drop vs. C-factor

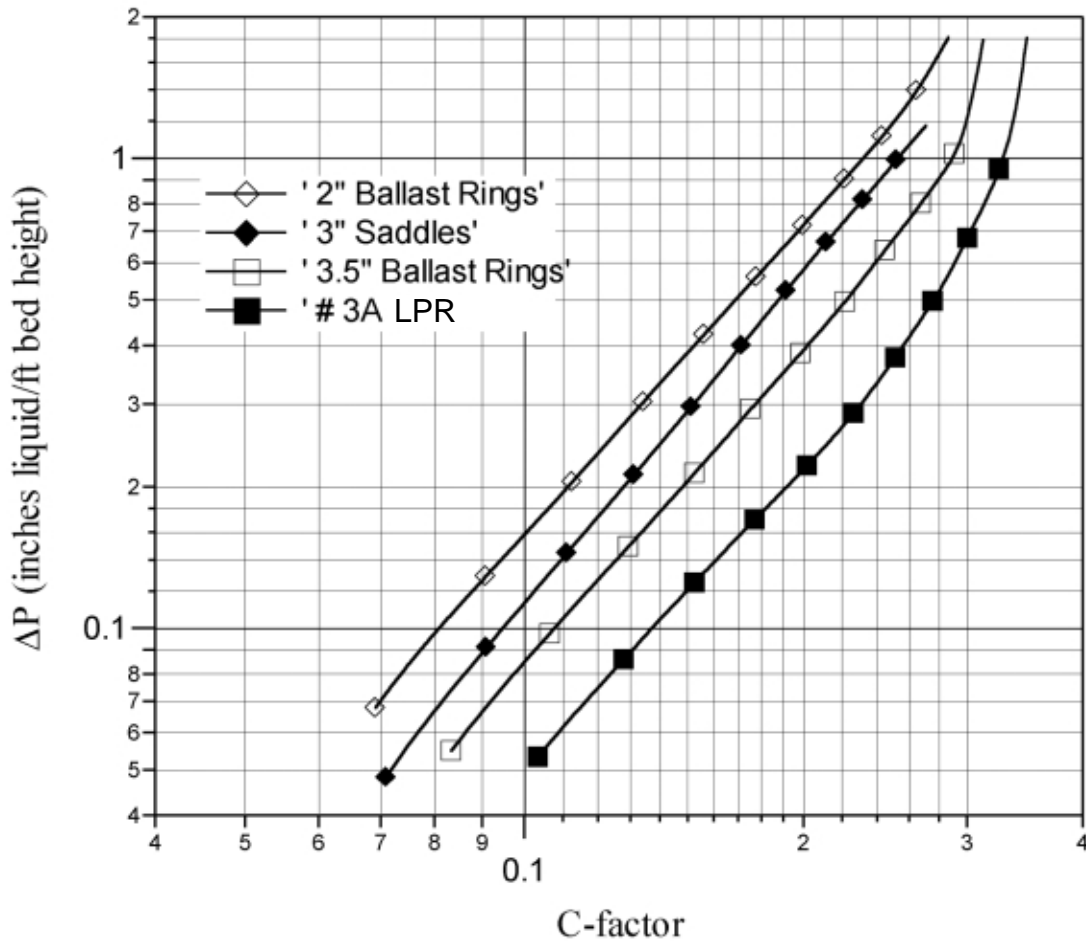

$$C\text{-factor} = V_s [(\rho_V) / (\rho_L - \rho_V)]^{1/2} \text{ where}$$

$V_s$  = Superficial vapor velocity in ft/sec  
 $\rho_L$  and  $\rho_V$  = Density of Liquid and Vapor in lb/cu. ft

# JAEGER